

Table of contents

Version: 220914 ID: DAA12

Requirement	1
For installing and running EMpower:	
Mac	
Troubleshooting	3
Windows / Linux	
Start the Installation	
Start EMpower	7



Minimum requirements for installing and running EMpower:

	Recommended
СРИ	64-bit Intel i7 equivalent or Apple Silicon
RAM	16 GB+
Screen Resolution	1920 x 1080
Installation disk space	200MB
Data disk space	50GB +(depends on the survey)
Internet Connection	Required to authenticate license code
SD Card reader	USB 3.0 <i>(or equivalent speed)</i> for data transfer
Monitor Size	13" +

Windows

Versions tested:

- Windows 10, 64-bit
- Windows 11, 64-bit
- Note: Windows 10S or 11S are **not** supported

Permissions required: Must be logged in as Administrator

Linux

Versions tested:

- Ubuntu 18.04, 64 bit
- Ubuntu 20.04.4, 64 bit

Permissions required: Standard user

Mac

OS versions tested:

Version: 220914 ID: DAA12

- 10.15.4, "Catalina" 64 bit
- 12.0, "Monterey" 64-bit (Apple silicon), Rosetta installed

Permissions required: Standard user account



Mac


Version: 220914

ID: DAA12

1. Drag and drop the installer onto the Applications folder to begin the installation.



2. Read the EMpower License Agreement

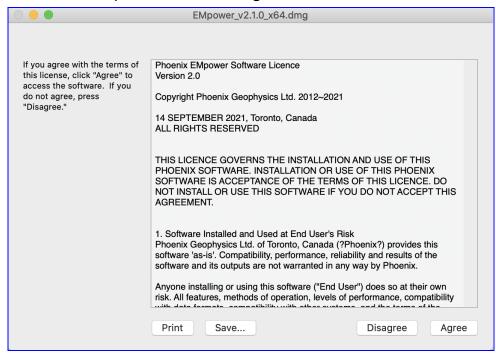

 If you agree with the terms of the EMpower license agreement, then click the Agree button




Troubleshooting


Version: 220914

ID: DAA12

1. Mac OS default security settings block installing EMPower because Phoenix is not a registered developer

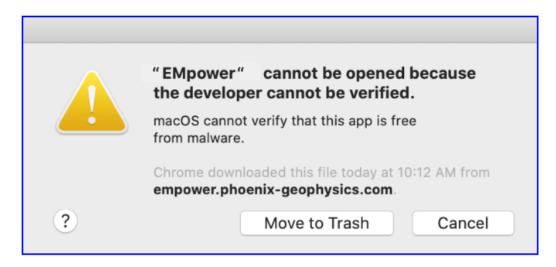

 To continue the installation, go to macOS System Preferences / Security & Privacy and click on **Open Anyway**

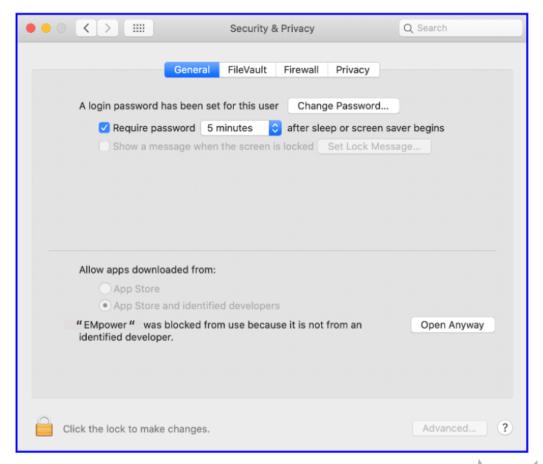




Windows / Linux

1. EMpower Setup Wizard by double clicking on the Empower installation executable file. This file will look similar to the example shown below.

Windows: EMpower_v2.#.#.#_x86_amd64.exe

Linux: EMpower_v2.#.#.#_x_x64.run

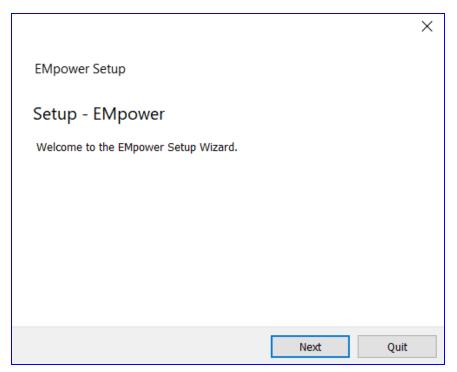


Click Next

Version: 220914 ID: DAA12



2. Installation Folder

 Use the default directory from the installer, or press Browse to select a different directory

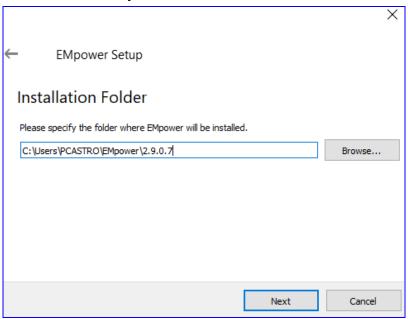


Click Next



Version: 220914 ID: DAA12


3. Hard drive memory space required

- Review the memory space requirement
- Click Next

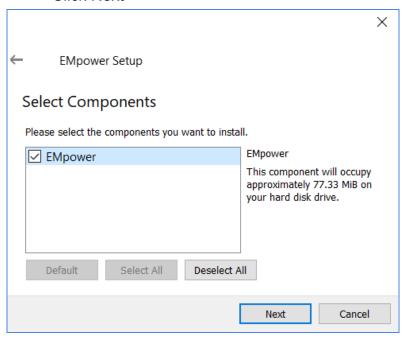


4. Read the EMpower License Agreement.

- o If you agree with the terms select "I accept the license" option
- Click Next button

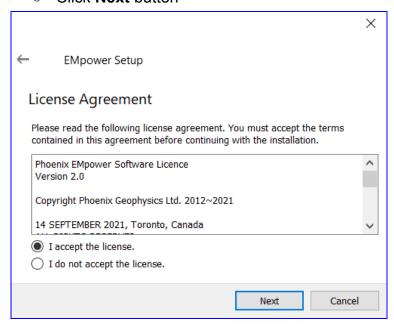




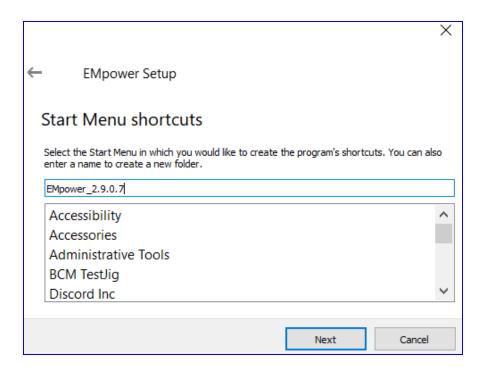

5. Start the Installation


o Click the **Install** button to begin the installation

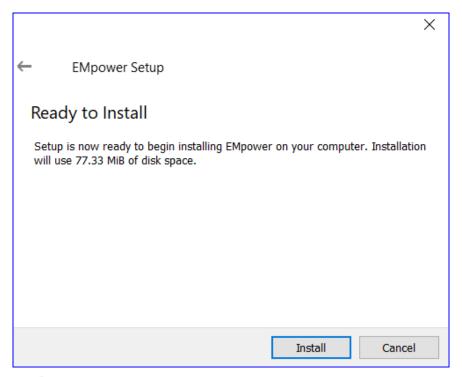


Ü

The windows installer does not have a back button.



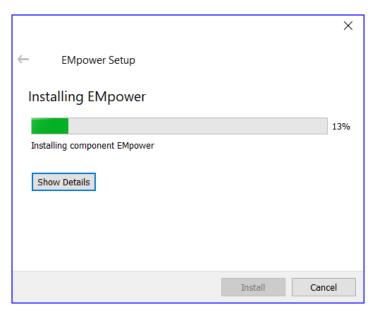

6. Click the **Finish** button to complete the EMPower installation

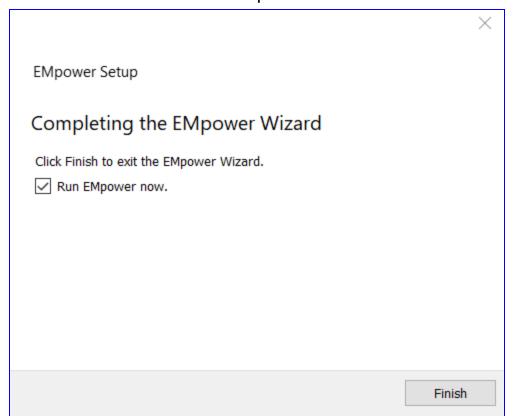




Start EMpower

1. Click the **EMpower** shortcut icon (Windows / Mac)



- o In Linux, run the empower.sh script in the EMpower installation directory
- 2. The Text "Unlicensed" will appear at the bottom of the **EMpower** application window
 - o The Prepare module can be used without license

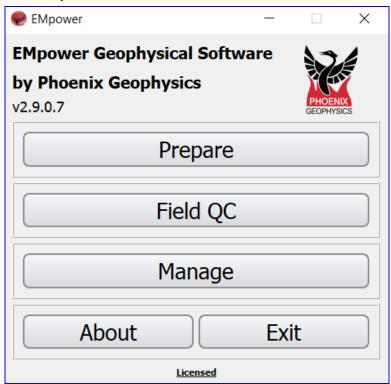

3. The Manage module can only be used activating the EMpower license, (see EMpower - License activation document)



Please check out the <u>FAQs</u> (<u>https://phoenixgeophysics.freshdesk.com/</u>)
Or email us at: support@phoenix-geophysics.com

